X2 Setup Guide

Please read before unpacking.

Getting started:

Make sure you have enough space to unpack your turntable.

Always unpack and setup in a clean enviroment

Important for warranty: Do not throw packaging away.

1 Unpack all items from accessory box.

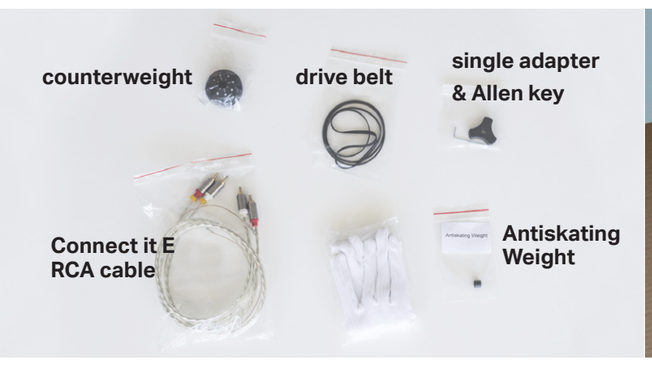

2 Remove dust cover carton from the box.

3 Lift the wrapped turntable out of the box.

4 Unpack the acrylic platter and subplatter.

5 Unpack the power supply.

6 Carefully remove the protection covering.

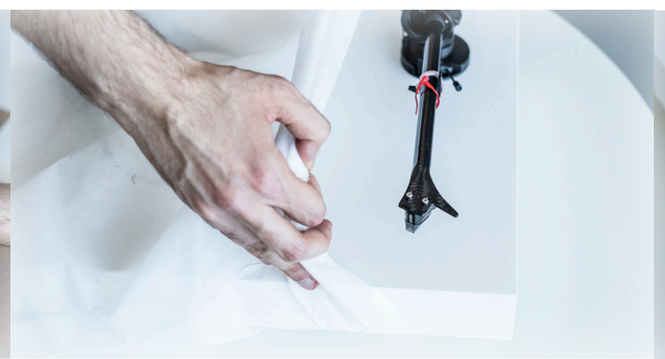

7 Put the drive belt on the pulley & sub-platter.

8 Put the platter on the turntable.

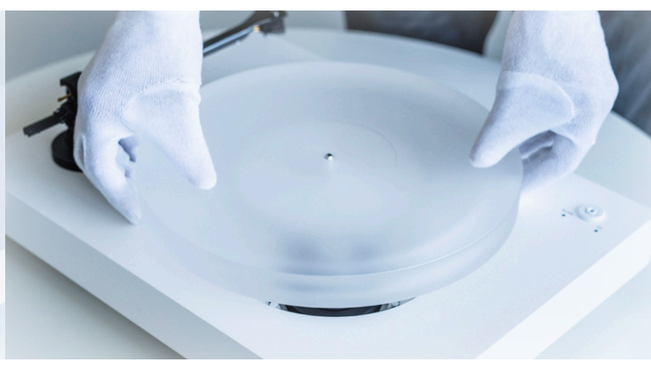

9 Remove tonearm twist tie.

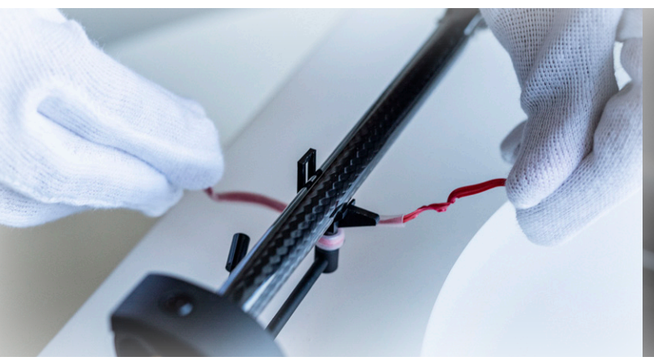

10 Unpack the Antiskating stub and screw it into the pre-drilled hole.

11 Put the counterweight in place.

12 Remove the needle protection cover.

13 Lower the tonearm lift and place the tonarm between platter & armrest.

14 Balance the tonearm by turning the counterweight until it stays level.

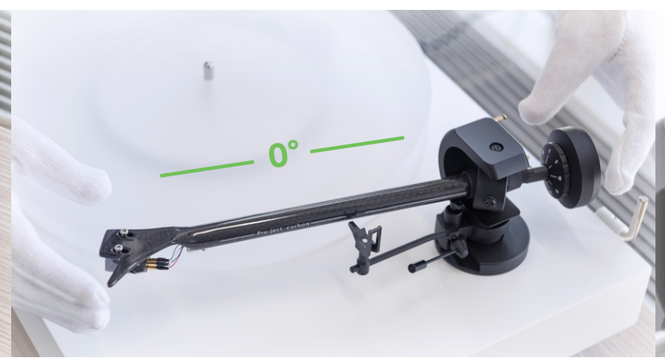

15 Turn the front scale of the counterweight to Zero without moving the weight itself.

16 Turn the counterweight counterclockwise until the scale reads roughly 18.

17 Put the needle protection cover back on the cartridge.

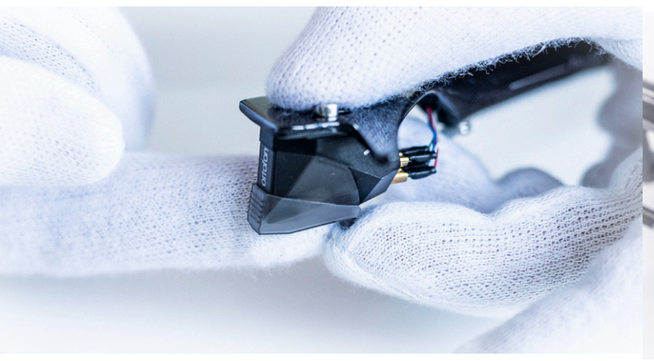

18 Put the loop of the Antiskating Weight in the second groove on the tonearm post.

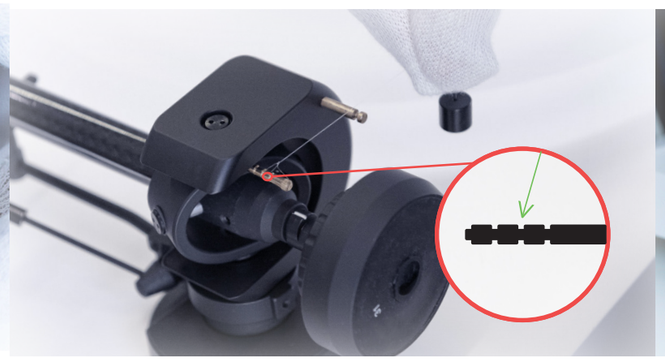

19 Unpack Dust Cover and put it on the turntable.

20 Connect to your sound system and you are ready to enjoy your records!

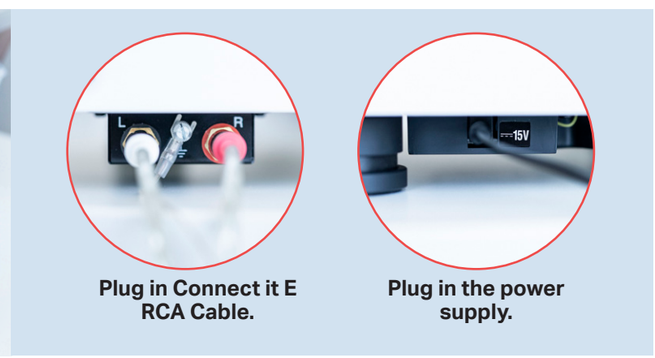

Plug in Connect it E RCA Cable.

Plug in the power supply.

Technical Data

Speed	33, 45, 78 (electronic speed change)	**Effective arm length**	9"/230 mm
Principle	belt drive	**Overhang**	18 mm
Speed cariance	33: +/-0,25%; 45: +/-0,20%	**Effective tonearm mass**	13,5 g
Wow & flutter	33: +/-0,12%; 45: +/-0,10%	**Tracking force range**	0 - 30mN
Platter	30mm thick acryl, 2 kg heavy acryl	**Power consumption**	4.5 W max / 0.3 W standby
Main bearing	Stainless steel	**Dimensions**	460 x 150 x 340 mm (WxHxD) lid closed
Tonearm	9" carbon/aluminium sandwich tonearm	**Weight**	10 kg net

www.project-audio.com/en/products/x2

Pro-Ject

AUDIO SYSTEMS